




UNITE CO

INSTINCT PEDAL


Fitting Instructions



RIGHT HAND PEDAL

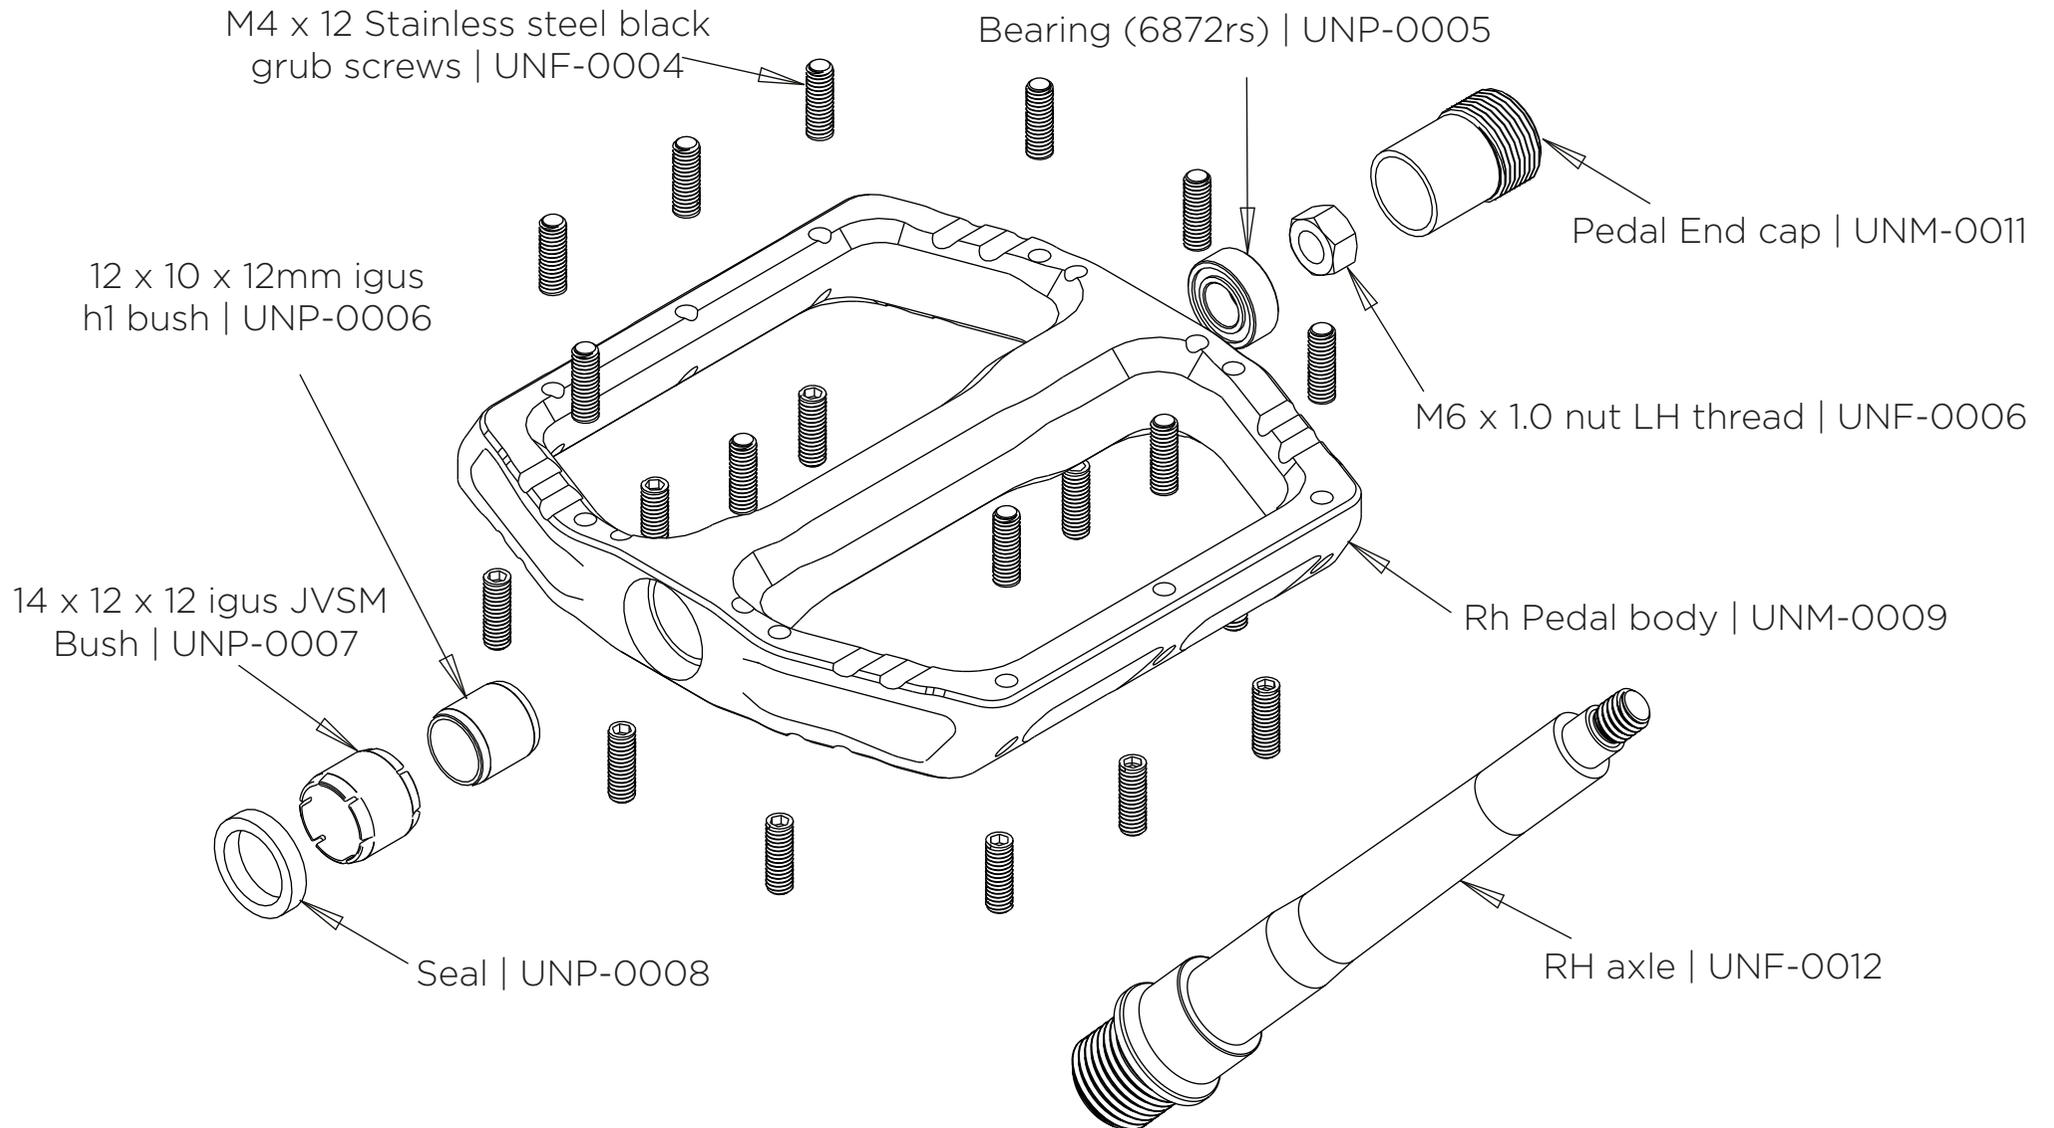

LEFT HAND PEDAL

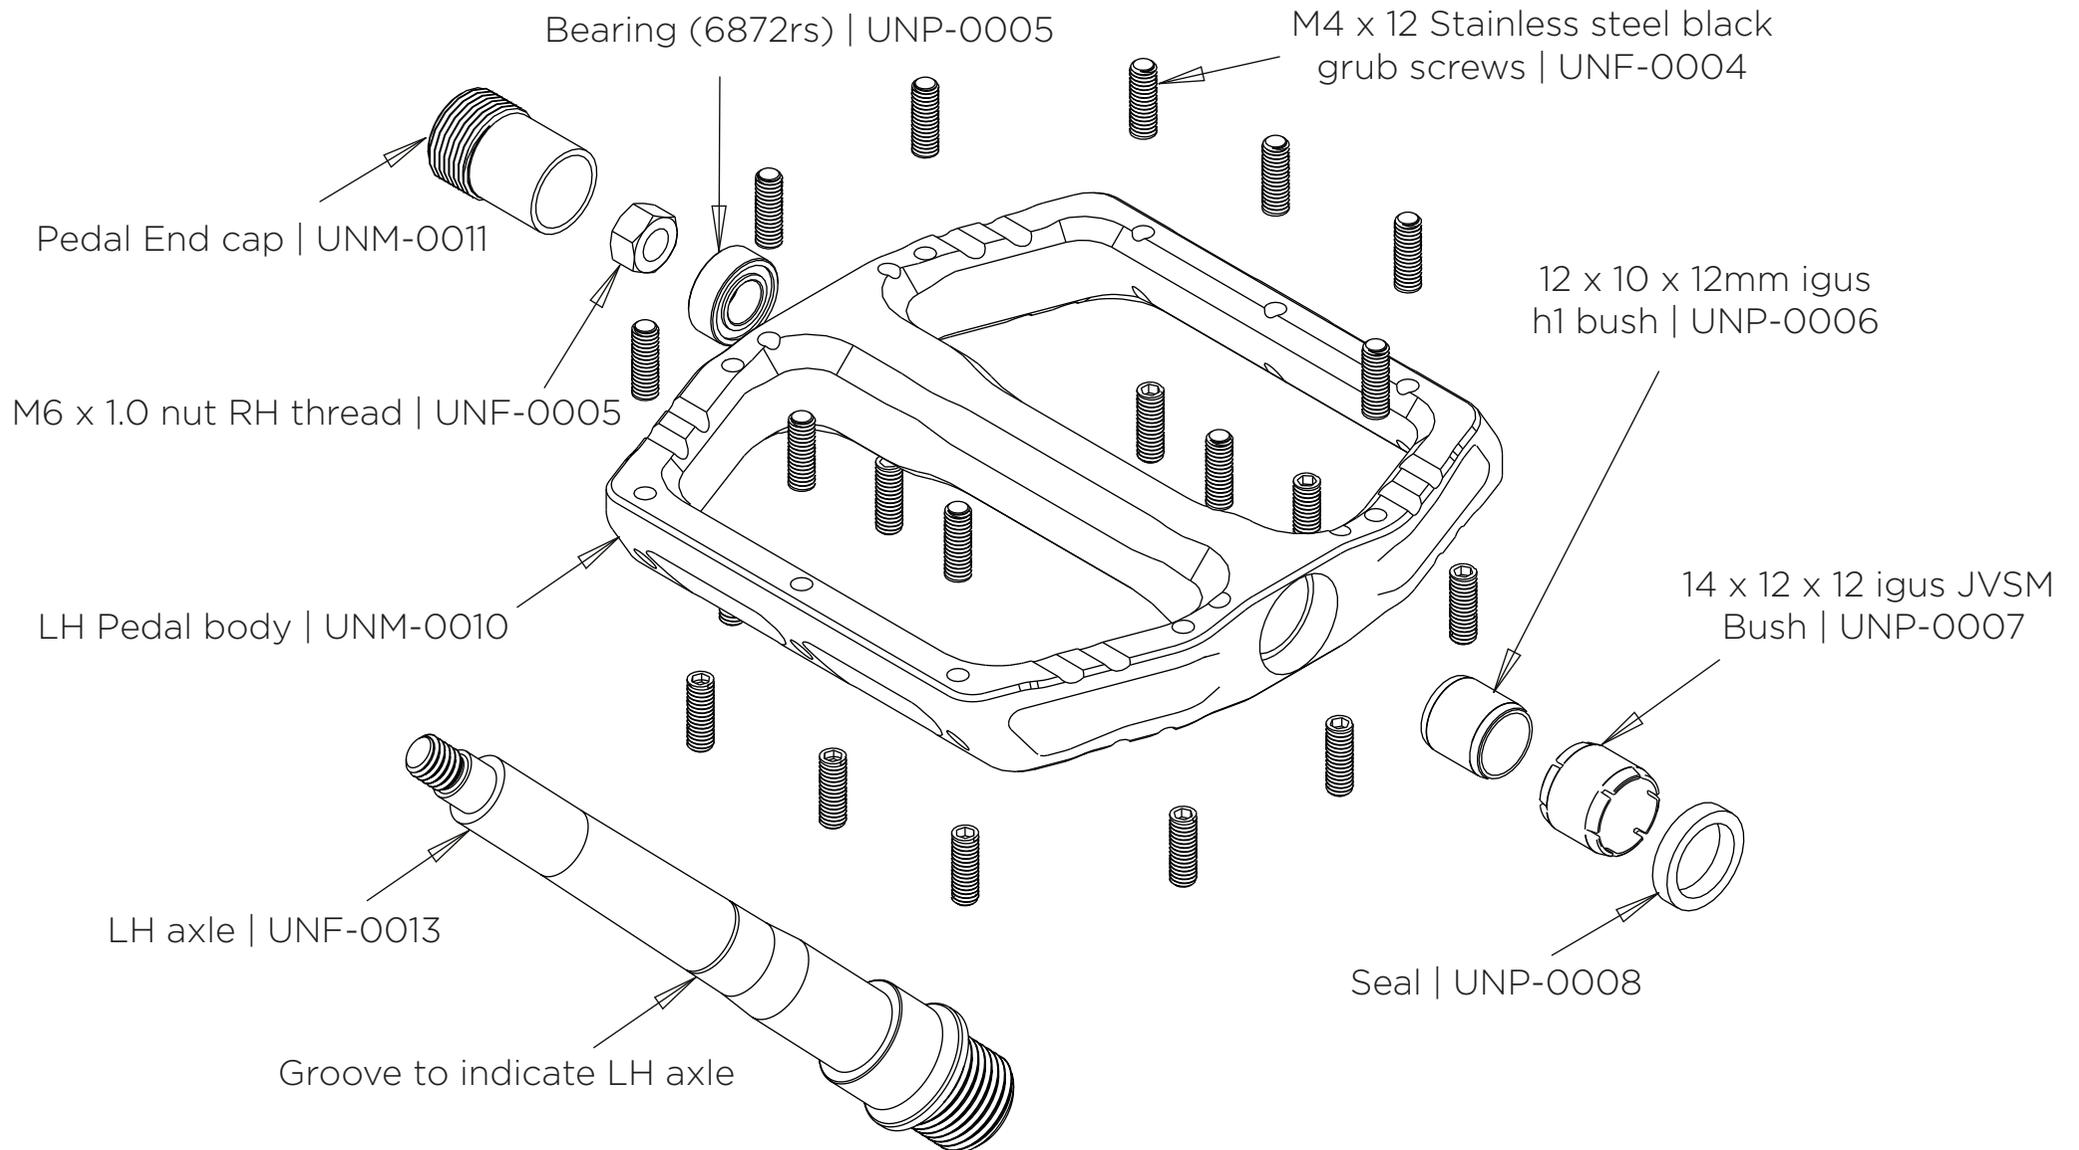

Tools Required

8mm Allen key
2mm Allen key
loctite

Assembly

Apply a small amount of loctite to the pins, screw in by hand and tighten from the opposite side using a 2mm allen key - Torque to 4 N.m

Installation

Identify the RH and LH pedal by looking at handing of the thread, check the crank arms a free of any dirt and there is no damage to the threads. Lightly grease the axle thread, install the left hand pedal by turning counter clockwise and turn clockwise for the right hand pedal. Tighten using an 8mm allen key to 35-40 N.m

Maintenance


We recommend using lithium based grease for the lubrication of our pedals. The Icus bush is self lubricating but a very small amount of grease is added when assembled. The bearings can be lubricated by removing the pedal end cap using a 6mm Allen key, fill the cavity with grease and re install the end cap. We have replacement bearing/bush Sets available on our website for regular servicing along with specific tooling to help remove the bearings and bushes.

All parts are available as spares, please email us sales@uniteco.bike along with the part number, which can be found on the assembly drawings,

Warranty

All of Unite Co products come with a leading 2 year warranty against manufacturing defects. Normal wear and tear from general use and damage as a result of misuse, abuse, neglect, alteration, or failure to perform maintenance is not covered.

For all warranty claims please email us at warranty@uniteco.bike All warranty claims must be accompanied with proof of purchase.

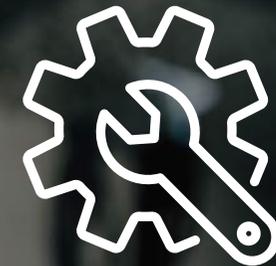

CUSTOMISABLE



UNITE